



 
**SAYS**

VIDAS EN 

**User Manual**

**WIRELESS SOUND TOWER**

**TSI-150WCMB**

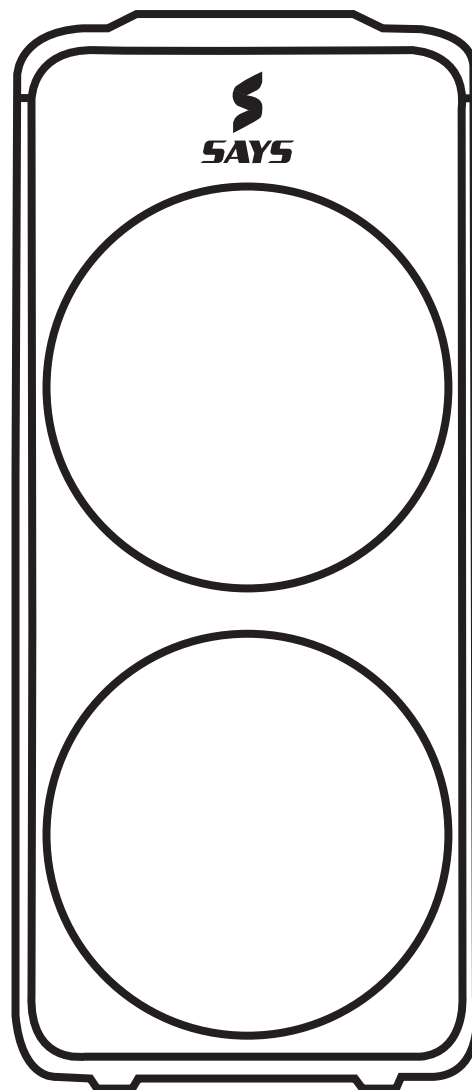

Learn more about us  
**Follow us!**

  @Saysoficial.ve  @Says

 +58412 50 500 50 (Whatsapp)

 Saysgroup.com



Please, read carefully this manual before to use this unit.  
Keep safe this manual for future references.

The picture is only provided for reference. Please refer to actual the unit!

## Accessories

 
Sound Tower Unit x1

Instruction Manual x1

Power Cable x1

Remote Control x1

## Top panel operation

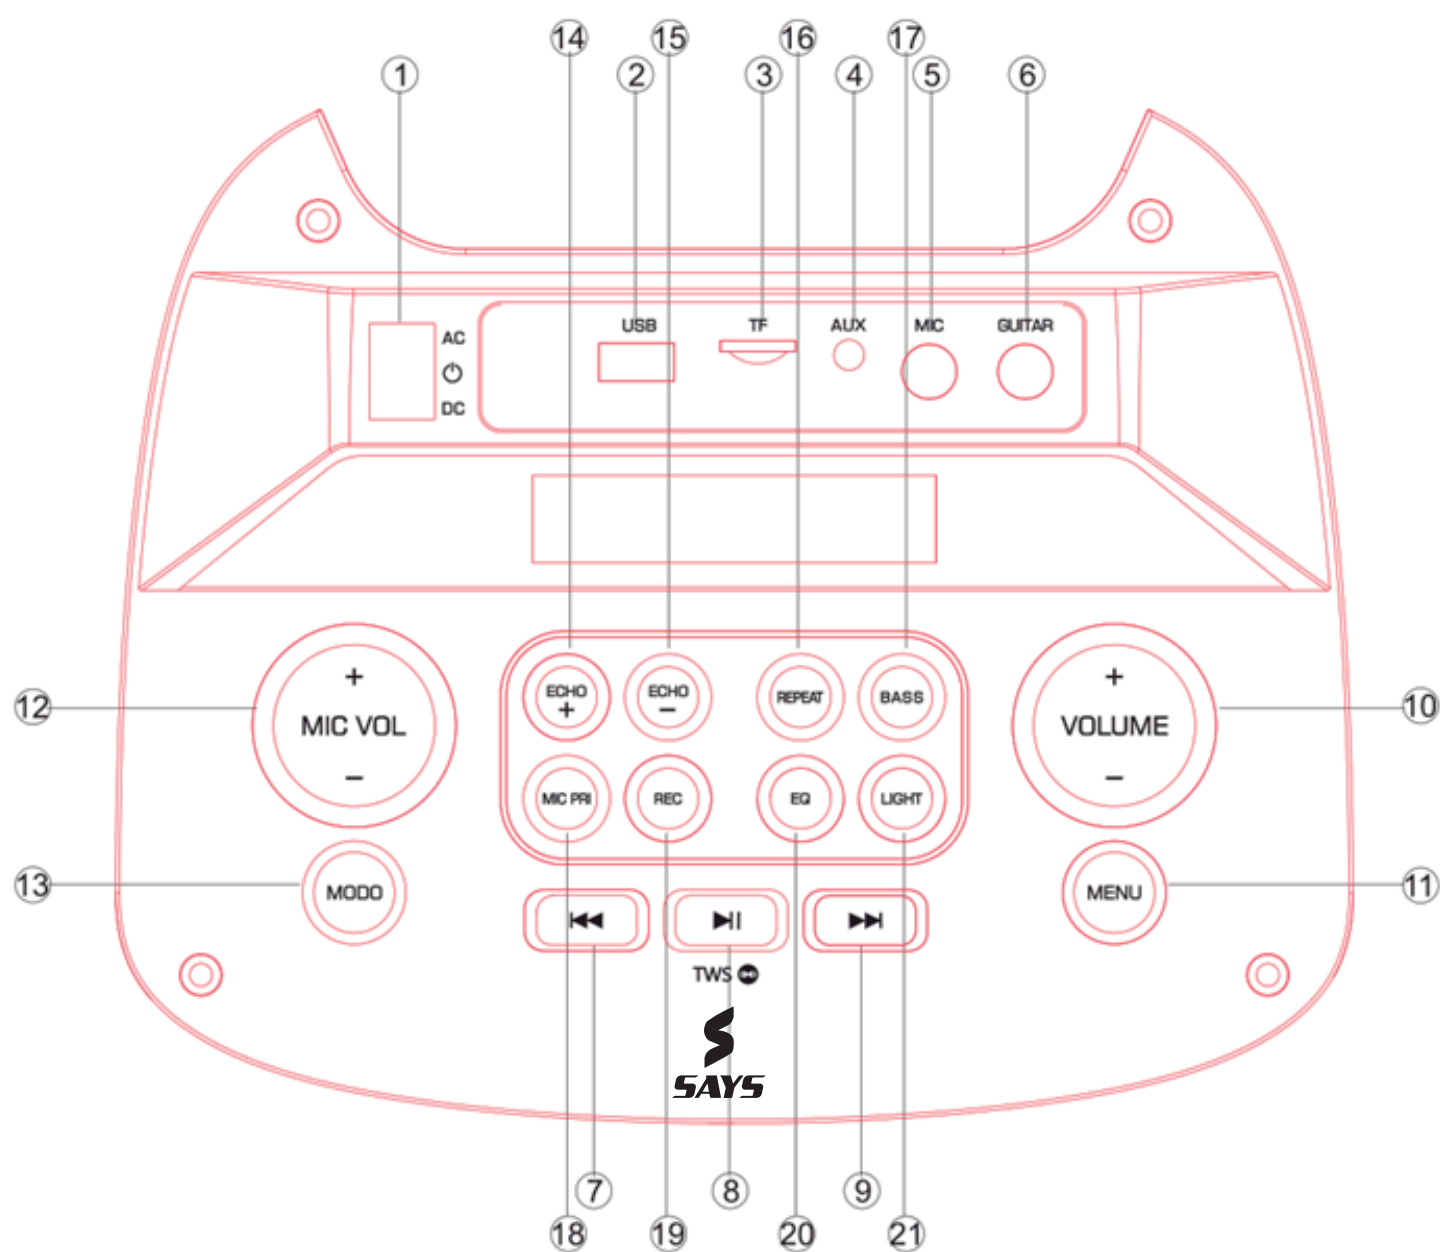

1:Power switch(AC play- Power off-DC play)

2:USB play back

3:Micro SD card play back

4:Aux-in (3.5mm PIN line cable)

5:MIC input,

6:Guitar input


7:Short press for Previous song,long press for fast backward

8: Play/pause under USB/TF/BT, auto search under FM mode. Long press this button to enjoy TWS function.

- 9:Next song: short press for next song,long press for fast forward.
- 10:Volume control. Long press volume+/- to increase/decrease the LED light
- 11MENU(control BASS/Treble),long press this button to restore factory settings
- 12:Microphone volume control
- 13:Mode switch
- 14:Microphone Echo +
- 15:Microphone Echo –
- 16:REPEAT one song, repeat all song
- 17:Press to get super bass effect
- 18:Microphone priority(when playing USB/TF and press this button,the microphone volume will override songs in USB/TF)
- 19:Short press to Rec songs from microphone to USB/TF, long press to play recording,long press again to delete recording
- 20: EQ effect switch

## Remote control

 - 1.Mute  
Available to be mute at any mode
- 2.Previous Song  
Under USB/TF card mode - previous song.  
Under BT connection mode- previous song.
- 3.Mode  
Press shortly to skip to Wireless BT/LINE  
IN/USB/TF mode.
- 4.Record function  
Under USB/TF card mode,press “REC” button  
to record
- 5.Echo-
- 6.BASS+/-
- 7.EQ function
- 8.Microphone Volume+/-
- 9.Stand by
- 10.Pause&Play
- 11.Next song  
Under USB/TF card mode - next song.  
Under BT connection mode- next song.
- 12.Light mode

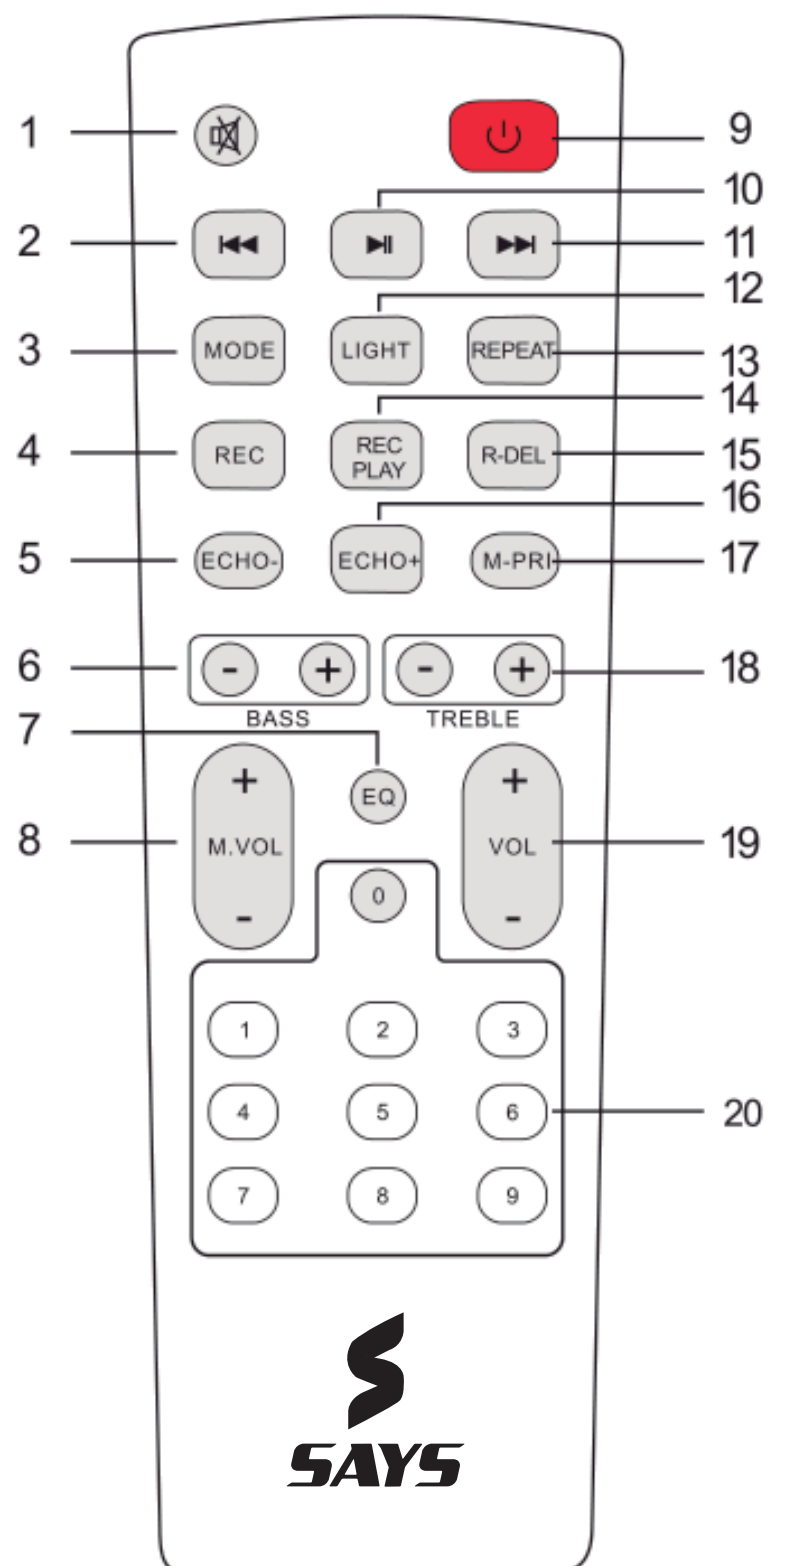



- 13.Repeat function
  - 14.Record play
  - 15.Record delete
  - 16.Echo+
  - 17.Microphone priority
  - 18.Treble+/-
  - 19.Main Volume
  - 20.Number buttons
- Under USB/TF mode to choose songs

## Operating instructions

### Wireless BT Pairing Mode:




Press MODE or Blue button on the unit or the remote control until BT is selected.

1. Put the cell phone within 20 meters;
- 2.Activate the BT features on your cell phone so that the cell phone starts to search for the BT device. Please refer to the users' manual for details
3. Select the correct model No.(TSI-150WCMB)The device found by the cell phone;
4. Shortly press PLAY/PAUSE button to play or pause music. Short press “” or “” key to select the previous or next track.

### ●LINE IN MODE:

Press MODE button on the unit or the remote control until LINE is selected. Play the music of the device connected to the LINE input.

### ● USB Mode:

1. After start up, press MODE to select “USB” and insert the USB device. The unit will automatically read and play the music in the USB device.
2. Press “” key shortly to pause or play.
3. Shortly press “” key to the previous song.
4. Shortly press “” key to the next song.

### TWS connection spec:

When you are playing a Sound Tower (host) under USB/TF/AUX/BT mode, at this time you want another Sound Tower to share this song. You can turn on a new Sound Tower, Long press “Play/pause”button,the LED display will show “SLAU” and keep blinking, now it is searching the host. Once found host, this new Sound Tower will connect automatically the host,and “SLAU” will not blink, At this time 2pcs Sound Tower are playing the same song.

The new join Sound Tower can operate:play/pause - previous song- next song- Volume control



## Warranty and customer service

The warranty does not apply in case of:

- Normal wear and tear of the product.
- Improper use, for example, overloading the device and the use of non-approved accessories.
- If the product has been tampered with; damaged, repaired by unauthorized persons or any wrong use.
- Does not apply if there was use of force or any damage caused by external or internal influences.
- Damage caused by non-observance of the instruction manual, for example, connection to a network improper power supply or failure to follow installation instructions.
- Device partially or totally dismantled.
- This warranty is limited to manufacturing defects.

Please attach your sales receipt to this manual and save it for future use if needed.

Proof of purchase is required under these warranty conditions.

Warranty and more information please contact us at:

 [atencion@saysgroup.com](mailto:atencion@saysgroup.com)

 +58412 50 500 50 (Whatsapp)

 0501-SAYS501 (0501-7297501)  [Saysgroup.com](http://Saysgroup.com)

*PERSONALIZED ATTENTION*

**INSURED  
WARRANTY**