



SAYS

VIDAS EN 

User Manual

WIRELESS SOUND TOWER TSI-80WCMB



Learn more about us
Follow us!

  @Saysoficial.ve  @Says

 +58412 50 500 50 (Whatsapp)

 Saysgroup.com



Please, read carefully this manual before to use this unit.
Keep safe this manual for future references.

The picture is only provided for reference. Please refer to actual the unit!

Accessories

Sound Tower Unit x1

User Manual x1

Power Cable x1

Remote Control x1

Safety Information

 
Please read this manual carefully before using the product. keep it in a safe place for future reference.

- a. There are high voltage zones inside this unit that can cause injuries. Please do not open the unit. In case of technical failure, please contact the authorized service centre.
- b. Never place the unit in the rain or in moist zones so as to avoid a fire or an electric shock.
- c. This device uses a laser system. To prevent direct exposure to the laser beam, please do not open the unit or stare at the laser beam.
- d. If technical maintenance is required, please contact the authorized service centre.
- e. If the supply cord is damaged in any way, please have it replaced by the manufacturer, supplier or a qualified electrician.

Caution

- a. Do not place the unit on an unstable surface as it may fall and break or cause damage to people or pets.
- b. Disconnect the unit from the mains before cleaning it. Do not use cleaning liquids or sprays. Use only a soft, damp cloth.
- c. To avoid possible damage to the equipment, please unplug it during storms or when it will not be used for a long time.
- d. Do not insert any object into the unit through the ventilation openings as this could cause a short circuit and start a fire. Do not pour liquid.

Top panel operation

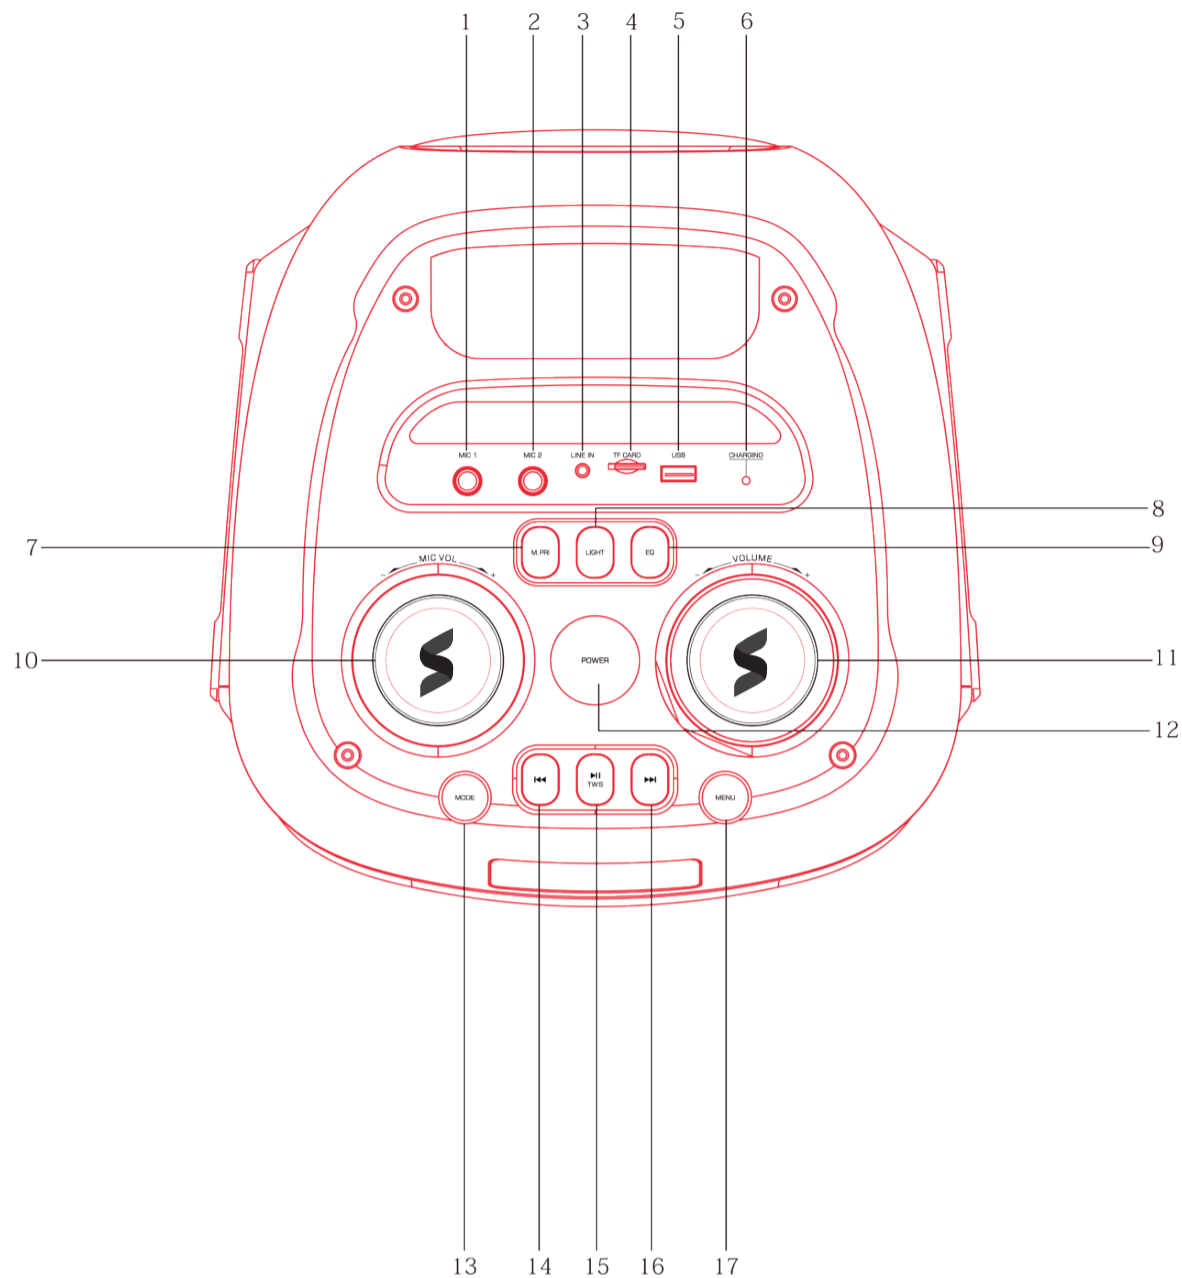

1. Microphone input -1
2. Microphone input -2
3. Line IN
4. TF card Input
5. USB Input
6. Charging indicator light
7. MIC priority
8. Light Mode
9. EQ function
10. MIC Volume
11. Main Volume
12. Power ON/OFF
13. Mode:(Line in, USB, TF Card, Wireless BT, FM)
14. Previous song
15. Short press to play/pause under USB/TF/BT, and press once to scan all stations and store automatically in FM mode.Long press to connect TWS function.
16. Next song
17. Menu: (control BASS/Treble/MIC Echo)

Remote control

1.Mute

Available to be mute at any mode.

2.Previous Song

Short press to get previous sound(under USB/-TF/BT/FM mode),
long press to fast backward(under USB/TF mode).

3.Mode

Press shortly to skip to BT/LINE IN/USB/TF/-FM mode.

4.Record function

Under USB/TF mode, press the “REC” button to record.

5.Echo-

Press to decrease the volume in any mode.

6.BASS+/-

Press to increase or decrease the bass.

7.EQ function

Press to select different EQ settings.

8.Microphone Volume+/-

Press to increase or decrease the microphone volume.

9. Stand by

10.Pause&Play

Short press to play/pause(Under USB/TF/BT),
Long press to connect TWS,and press once to scan all stations and store automatically in FM mode.

11.Next song

 
Short press to get next song(under USB/TF/BT/FM mode),
long press to fast forward(under USB/TF mode).

12. Light mode

Light effect switch and on/off.

13.Repeat function

Press to repeat one song or repeat all songs.
In BT/LINE IN mode, this button has no function.

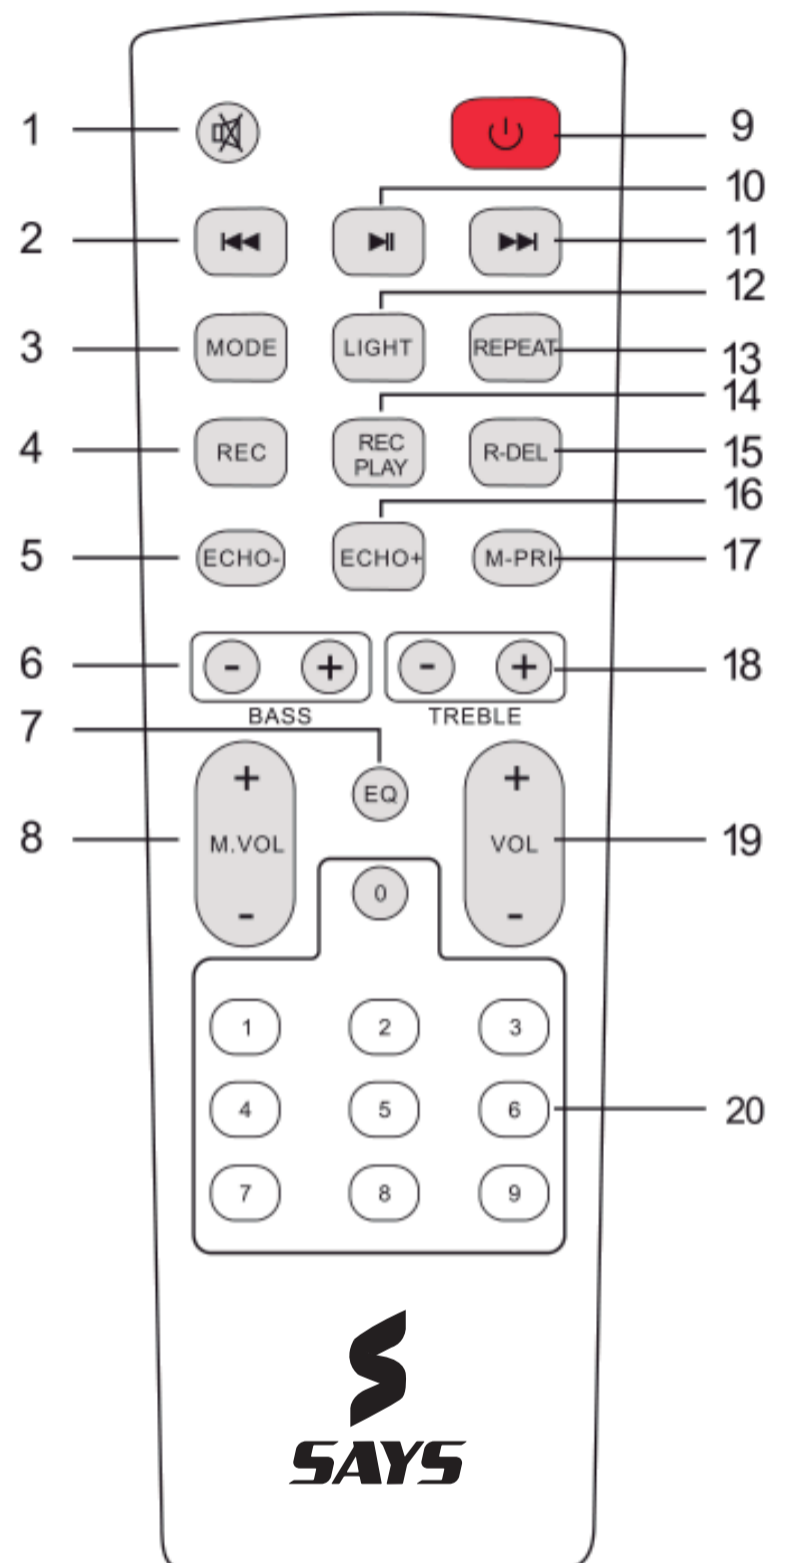

14. Record play

In USB/TF mode, press to play the record.

15. Record delete

In USB/TF mode, press to delete the record.

16. Echo+

Press to increase the Echo in any mode.

17. Microphone priority

When the Microphone is in use, press once to take priority over the music programme, press again to turn off this function.

18. Treble+/-

Press to increase or decrease the Echo in any mode.

19. Main Volume

20. Number buttons




Under USB/TF mode to choose songs.

In FM mode can choose the received station.

Operating instructions

Bluetooth Pairing Mode:




Press MODE button on the unit or the remote control until Bluetooth is selected.

1. Put the cell phone within 10 meters;
2. Activate the Bluetooth features on your cell phone so that the cell phone starts to search for the Bluetooth device.
3. Select the correct model No.: (TSI-80WCMB) The device found by the cell phone;
4. Shortly press “  ” key to play or pause music. Shortly press “  ” or “  ” key to select the previous or next track.

LINE IN Mode:

Press the MODE button on the unit or the remote control until the LINE is selected. Play the music of the device connected to the LINE input.

USB /TF CARD Mode:

1. After start-up, press mode button to select 'USB or TF card' mode, or insert the USB or TF card in this speaker, the unit will play the songs automatically.
2. Press “  ” key shortly to pause or play.
3. Shortly press “  ” key to the previous song.
4. Shortly press “  ” key to the next song

FM Mode:

1. Turn on the power and press the MODE button repeatedly to select the FM function (the frequency is displayed on the display).
2. Press the play button to activate the automatic memorization (the tuner searches for stations available and memorizes automatically).

The number of memorized stations depends on the reception in your area.

3. Use the next/previous buttons to listen to the memorized stations.
4. To select a memorized station directly, press the corresponding numeric key on the remote control.

TWS Mode:

The two Sound Tower can connect to each other in TWS mode.

1. Place the two TWS Sound Tower near each other (the distance should not be over 10 meters).

2. Power on the two Sound Tower, both Sound Tower selected to Bluetooth mode,

press and hold for about 5 seconds the TWS button on one Sound Tower as master

Sound Tower, TWS connection will be built up.

3. In TWS mode, press and hold TWS button for about 5 seconds on either Sound Tower or power off the Sound Tower to exit the TWS mode.

Warranty and customer service

The warranty does not apply in case of:

- Normal wear and tear of the product.
- Improper use, for example, overloading the device and the use of non-approved accessories.
- If the product has been tampered with; damaged, repaired by unauthorized persons or any wrong use.
- Does not apply if there was use of force or any damage caused by external or internal influences.
- Damage caused by non-observance of the instruction manual, for example, connection to a network improper power supply or failure to follow installation instructions.
- Device partially or totally dismantled.
- This warranty is limited to manufacturing defects.

Please attach your sales receipt to this manual and save it for future use if needed.

Proof of purchase is required under these warranty conditions.

Warranty and more information please contact us at:

 atencion@saysgroup.com

 +58412 50 500 50 (Whatsapp)

 0501-SAYS501 (0501-7297501)  Saysgroup.com

PERSONALIZED ATTENTION

**INSURED
WARRANTY**